

How to replace the printhead - iPF605

Description

How to replace the printhead - iPF605

Solution

Replacing the Printhead (iPF605)

<Caution>

- Do not touch the Printhead immediately after printing. The Printhead becomes extremely hot, and there is a risk of burns.


<Note>

- Prepare a new Ink Tank when ink levels are low.

- Your hands may become dirty during Printhead replacement. Use the gloves provided with the new Printhead for replacement.

- Choose **On** in **Auto Print** to have the printer automatically adjust the Printhead alignment after replacement of the Printhead.

1. Press the **Menu** button to display **MAIN MENU** .

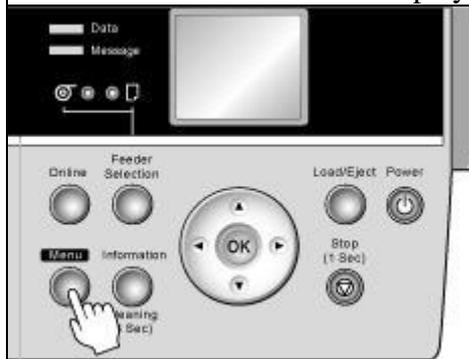

2. Press ▲ or ▼ to select **Maintenance** , and then press the ► button.


3. Press ▲ or ▼ to select **Replace P.head** , and then press ► the button.

4. Press ▲ or ▼ to select **Yes** , and then press the **OK** button.

Ink is now filled.


After about three minutes, a message is shown on the Display Screen instructing you to open the Top Cover .

5. Open the Top Cover .

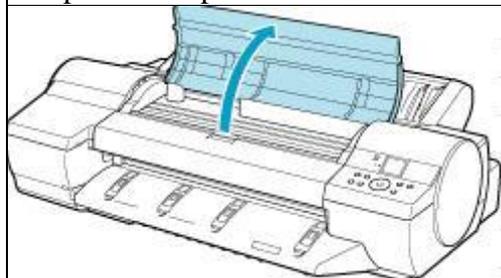


Instructions are now shown on the Display Screen regarding Printhead replacement.


6. If the Printhead Fixer Cover or Printhead Fixer Lever is dirty, use a damp cloth that you have wrung out completely to wipe it clean.

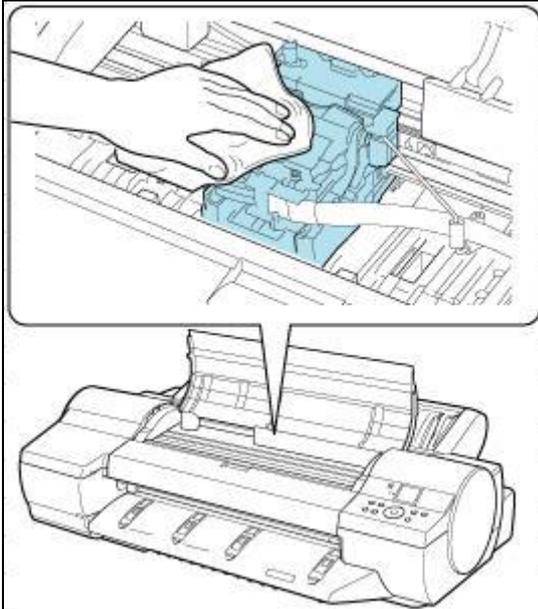


7. Pull the Printhead Fixer Lever forward all the way to open it completely.

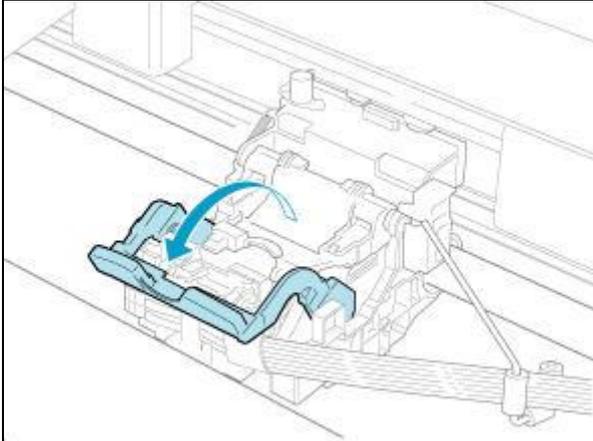


8. Pull up the Printhead Fixer Cover to open it completely.

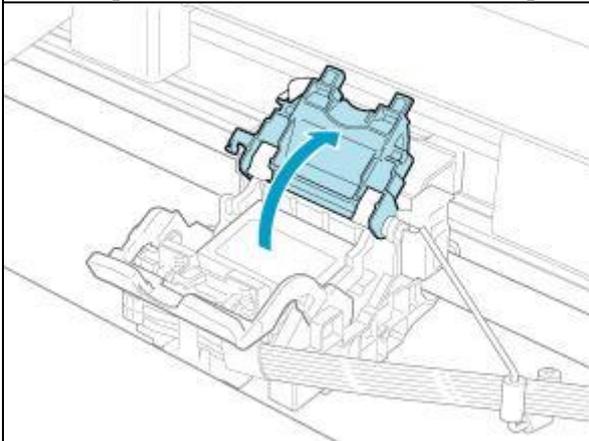


9. Remove the used Printhead .

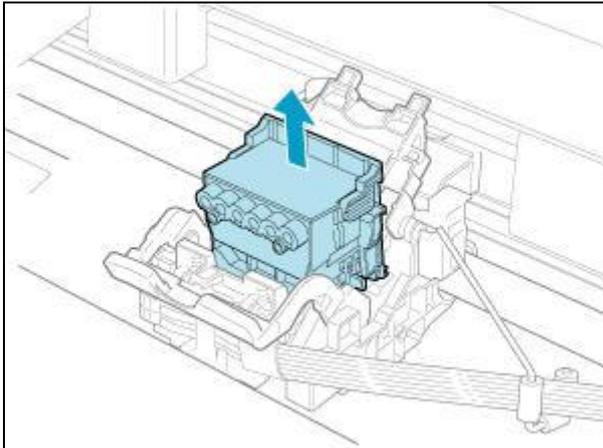


10. Holding the new Printhead by the grips (a), remove it from the case.

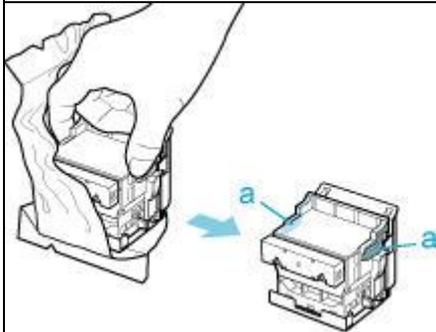


11. While firmly holding the Printhead you have removed, use your other hand to remove the orange Safety Cap 1 (a). Squeeze the grips (c) of Safety Cap 2 (b) and pull it down to remove it.

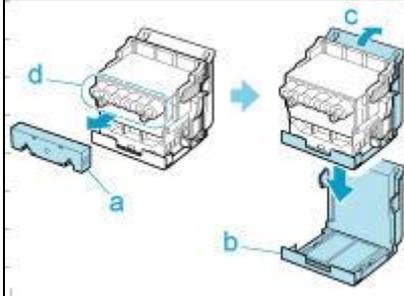


12. With the nozzles facing down and the metal contacts toward the back, insert the Printhead into the Carriage . Making sure that the metal contacts do not touch the Carriage , carefully push the printhead firmly into the carriage.

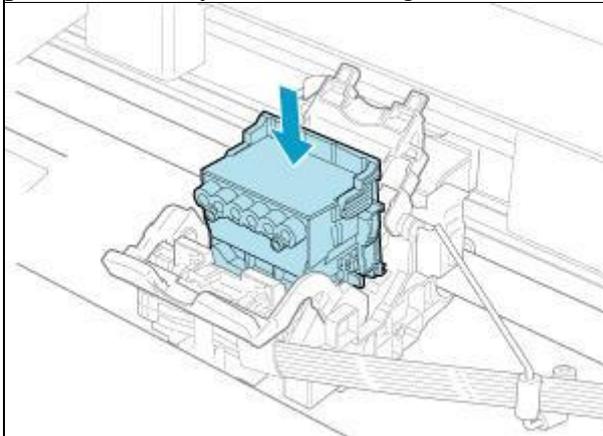


13. Pull the Printhead Fixer Cover down toward the front to lock the Printhead in place.

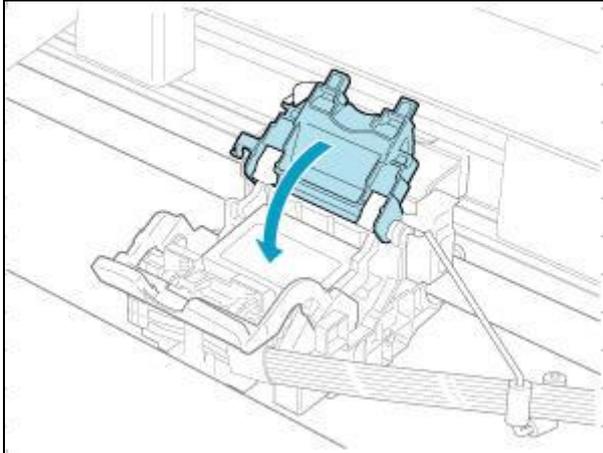

14. Push the Printhead Fixer Lever toward the back of the printer until it clicks.

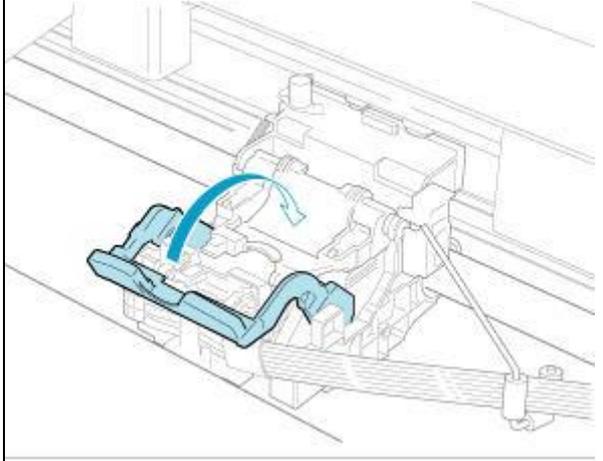

15. Close the Top Cover .

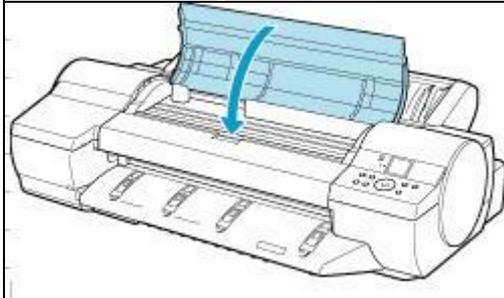

Ink now fills the system.

After about ten minutes, the Printhead alignment will be automatically adjusted, and the printer will go online.

If no paper has been loaded, a message is displayed requesting you to load paper.